



### EXPLANATION

- Fault**—Dashed where approximately located; dotted where concealed
- Boundaries**—
  - Morongo ground-water basin (approximate)**—
  - Subbasin boundary
  - Warren ground-water subbasin boundary**
- Water-table contour**—Shows altitude of water table (2002). Contour interval, in feet, is variable; dashed where approximately located, queried where uncertain. Hachures indicate depression. Datum is NAVD 88
- Generalized direction of ground-water flow**
- Well**—  
Top number is abbreviated State well number.  
Bottom number is altitude of water level, in feet above NAVD 88 (Spring 2002)
- Artificial-recharge sites**
- Hi-Desert Outlets*